



PASSANDE MASKINSÅGBLAD TILL DE VANLIGASTE KALLSÅGARNA

S = Standardfäste

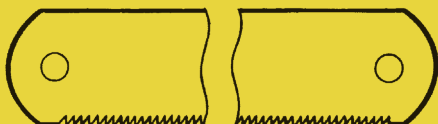

KA = Kastofäste

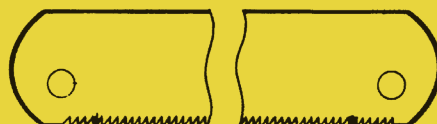

Bladdim.	Hål	Passar till kallsåg:		Bladdim.	Hål	Passar till kallsåg:	
mm	mm			mm	mm		
300x32x1,6	8,5	Kasto	UBS 160 WBS 150/170 WBS 172 BSM 115/175 RC 30	450x38x2	8,5	Kasto	BSM 240/270 BSM 260 A BSM 280 PSB 240 AU PSB 260 AU PSB 280 U UBS 240 A UBS 240 R UBS 280 VBS 282
350x32x2 (1,6)	8,5	Sajo Behringer	Super A 200 Super 212 BSM 202 BSM 210 BSM 180 A BSM 200 RA BSM 170/220 PSB 210 U PSB 180 AU UBS 200/180 A VBS 192	500x40x2 500x50x2,5	10,5 10,5	Kasto Kasto	BSM 323 EBS 250 EBS 250 A EBS 250 U BSM 350 EBS 360 U PSB 350 U PSB 360 U UBS 320
350x38x2 400x32x2x(1,6)	8,5 – 10,5 8,5	Ejvo Behringer	KS 190 KA KS 190 KS KS 190 N BSM 190/240 BSM 210/240 BSM 253 BSM 220 A BSM 250 RA VBS 242/252 WBS 210/230 PSB 200 AU PSB 250 U Super A 250 Super 252	575x50x2,5 600x50x2	10,5 10,5	Kasto Kasto	EBS 320 EBS 320 AU EBS 320 U BSM 403 EBS 340 AU EBS 360 U PSB 400 U EBS 400 EBS 400 U EBS 400 AU EBS 450 EBS 450 U EBS 460 U
400x38x2 (1,6)	8,5	Behringer	RC 45 RC 230 Super 222 HSA 250 HSA 260 LN 17/60 LN 17/69 A LN 17/73 LN 280 A	650x50x2,5 700x50x2,5	10,5 10,5	Kasto Kasto	EBS 560 U PBS 630 PBS 630 A Pbs 632 PSB 632 A PSB 800 PBS 802
450x32x2 (1,8)	8,5	Ejvo Sajo		850x60x3 1000x126x3,5	10,5 10,5	Kasto Kasto	
450x38x2	10,5	Behringer					
450x38x2	8,5 – 10,5	Ejvo		1160x150x4	10,5	Kasto	